

Hand Pump w/ Flow Indicator Operating Instructions

BA-MS-635

Important: Batteries may only be filled *after* charging.

1. Insert the Hand Pump into a jug of distilled water. (fig. 1)
2. Prime the bulb by squeezing until filled with water.
3. Once the bulb is primed, remove the dust cover from the battery watering system and mate the couplers. (fig. 2)
4. Squeeze the bulb with firm pressure to pump water into the battery cells. When the balls stop spinning inside the flow indicator, all cells are full. (fig.3)
5. Immediately disconnect the couplers and replace the dust cover.



BL-636
02/2020

Hand Pump w/ Flow Indicator Operating Instructions

BA-MS-635

Important: Batteries may only be filled *after* charging.

1. Insert the Hand Pump into a jug of distilled water. (fig. 1)
2. Prime the bulb by squeezing until filled with water.
3. Once the bulb is primed, remove the dust cover from the battery watering system and mate the couplers. (fig. 2)
4. Squeeze the bulb with firm pressure to pump water into the battery cells. When the balls stop spinning inside the flow indicator, all cells are full. (fig.3)
5. Immediately disconnect the couplers and replace the dust cover.



BL-636
02/2020