



ROTARY ACTUATOR ADAPTER PLATE

The normal hole saw size required for installation of the Flow-Rite premium actuator is 1-3/4". This adapter plate allows boats equipped with a competitive system, which utilizes a 2-1/16" hole, to be upgraded to a Flow-Rite premium system.

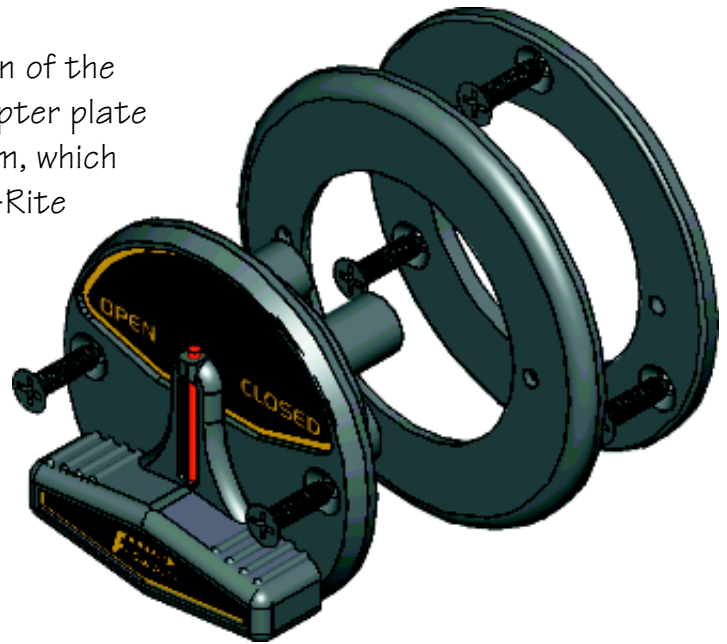

FRONT EXPLODED

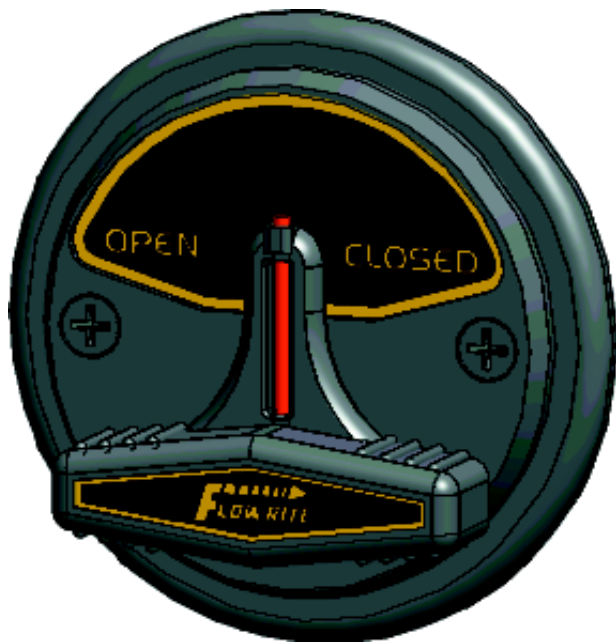

Using a round file, slightly enlarge the hole at the 3 and 9 o'clock positions to allow room for the adapter plate screw bosses.



REAR EXPLODED



Flow-Rite Controls, Ltd. ~ 3412 Lousma Dr. S.E. ~ Grands Rapids, MI 49548
Phone: (616) 243-2750 ~ Fax: (616) 243-5151 Website: www.flow-rite.com