

ROUGH TERRAIN WHEEL CONVERSION KIT

For the Portable Watering Cart (BA-MS-115)

Kit Contents

Each kit includes:

- Axle
- (2) 10" Solid Wheels
- (2) 4" Casters
- (2) Spacers (shown installed on the axle in the picture)
- (2) Cotter Pins (not shown)




Tools Needed:

- Phillips Screwdriver
- Pliers

Kit Part Number BA-MS-117

INSTALLATION

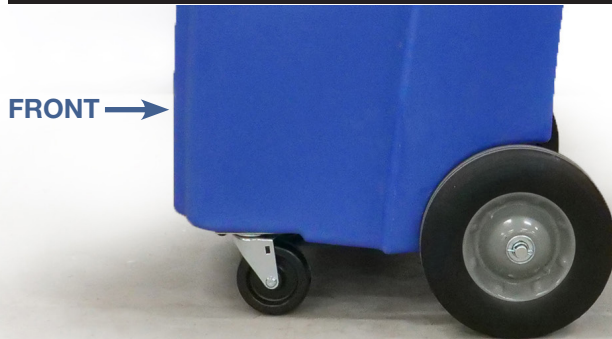

Note: Before you begin installation, make sure the water cart is empty.

1. Slide both spacers and both 10" wheels onto the axle, installing wheels on the outside of the spacers.
2. Slide cotter pins into the holes on axle, set aside.
3. Lay water cart onto its front allowing access to the back and then remove the 4 screws holding the axle cover plates (these will be reused).
4. Pull old axle assembly off cart and set aside.
5. Install the new axle assembly and slide spacers and wheels at opposite ends of the axle until stopped by the cotter pins.
6. Place the new assembly into the cavities making sure the spacers and wheels are outside the wheel well.
7. Replace covers and fasten back into place with screws.
8. Once the axle is secured in position take pliers and bend the cotter pin to hold the wheels in place.
9. Remove (4) screws that are holding the caster wheels in place (these will be reused) and replace with the new 4" rough terrain caster supplied in the kit and fasten with the (4) screws.
10. Repeat step 9 on the opposite caster.



Flow-Rite Controls
960 74th St. SW
Byron Center, MI 49315
PH: 616-583-1700
www.flow-rite.com