


Flow Indicator Flexible Extension Assembly Instructions

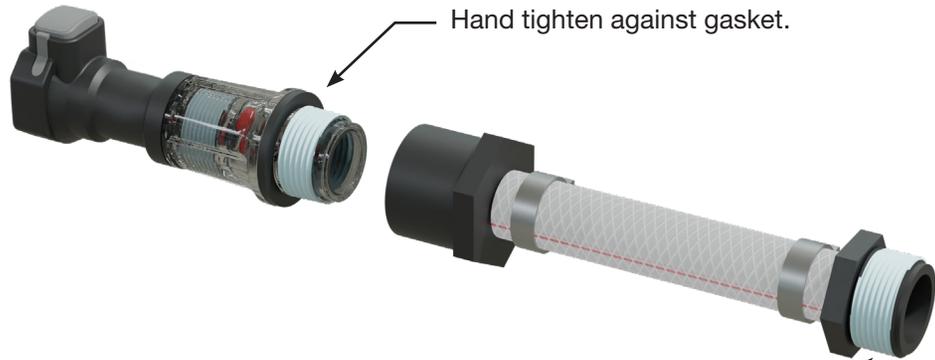

Hand tighten against gasket.

Wrap the threads of the Flexible Extension (BA-580) three times with PTFE Tape (BD-385) then screw it into the Regulator (BA-003).




Completed Assembly



960 74th Street SW
Byron Center, MI 49315
616.583.1700
flow-rite.com
BL-398-110921

Flow Indicator Flexible Extension Assembly Instructions

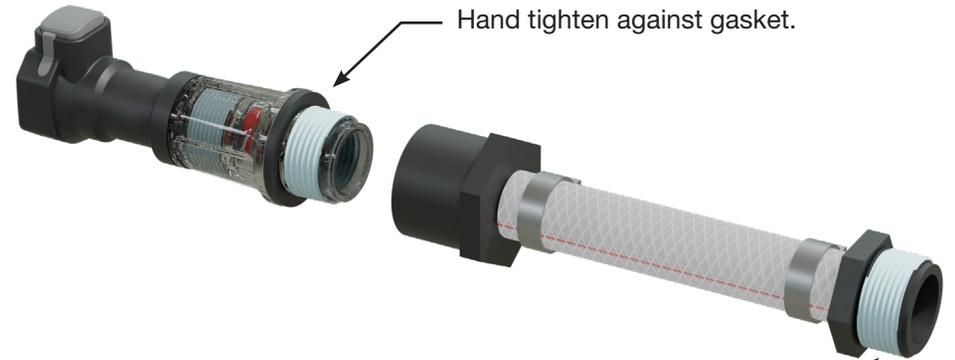

Hand tighten against gasket.

Wrap the threads of the Flexible Extension (BA-580) three times with PTFE Tape (BD-385) then screw it into the Regulator (BA-003).



Completed Assembly



960 74th Street SW
Byron Center, MI 49315
616.583.1700
flow-rite.com
BL-398-110921