


# POWER-JET AERATOR INSTALLATION INSTRUCTIONS

The Power-Jet aerator can be used with any recirculating pump or with Flow-Rite system #3, or 4. For a transom mounted aerator pump, use the Flow-Rite PowerStream aerator with anti-siphon feature.

## Mounting the Power-Jet venturi elbow.

Install the elbow in the lower portion of the livewell using a 1-1/16" dia. hole. Elbow should be positioned near a corner to provide a circular current and 6 to 9 inches below the livewell water surface. Use a suitable marine sealant on elbow threads.

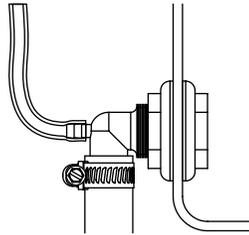

## Mounting the Power-Jet air intake.

Three installation methods are available for the air intake. Choose the method that applies to your situation.



### Method A

#### Mounting air intake without decal.

Drill a 3/8" hole in a location well above the highest water line of the livewell in an area that allows the routing of the air intake tubing.

Insert air intake with rubber gasket.

Use a 3/16" allen wrench in air intake head while tightening nut on back side of tank wall. Push air hose onto air intake.

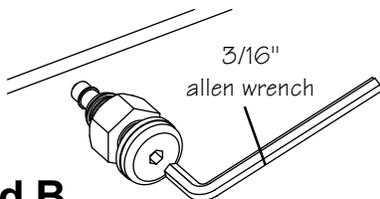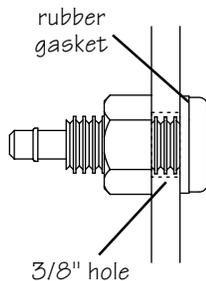

### Method B


#### Mounting air intake with decal.

Pick a location well above the highest water line of the livewell in an area that allows the routing of the air intake tubing. This is usually an area along the vertical rise of the gunnel.

Drill a 3/8" hole, deburr and clean surrounding area with alcohol.

Mount the air intake fitting to a 3/16" allen wrench.

Carefully remove decal from protective backing and insert intake fitting through center hole.

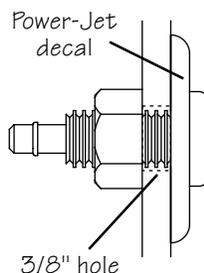

**Important note:** once label is removed from protective backing, care must be taken to avoid touching the exposed adhesive backing. The use of a 3/16" allen wrench as shown will aid in this task.

Orient the text properly and push assembly into 3/8" mounting hole.

When decal is firmly bonded to surface, install mounting nut.

Using the 3/16" allen wrench tighten nut on back side of tank wall. Push air hose onto air intake.

### Method C



#### Mounting Air Intake when there is no access to back of mounting surface.

Pick a location well above the highest water line of the livewell in an area that allows the routing of the air intake tubing. This is usually an area along the vertical rise of the gunnel.

Drill a 3/4" hole, deburr and clean surrounding area with alcohol. Route tubing from aerator leaving a few inches of excess tubing out hole.

Mount the air intake fitting to a 3/16" allen wrench.

Carefully remove decal from protective backing and insert intake fitting through center hole.

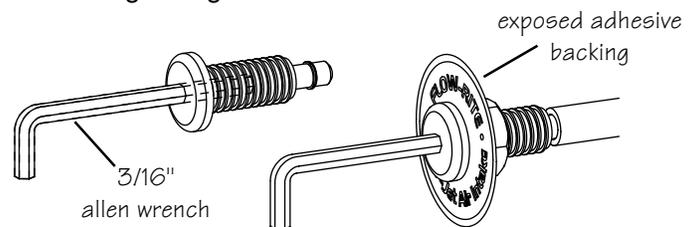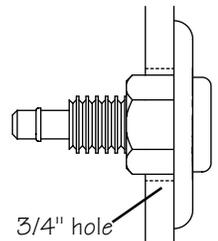

**Important note:** once label is removed from protective backing, care must be taken to avoid touching the exposed adhesive backing. The use of a 3/16" allen wrench as shown will aid in this task.

Install mounting nut.

Install air intake tubing to air intake fitting.

Orient the text properly and push assembly into 3/4" mounting hole. When decal is firmly bonded to surface, remove allen wrench.