



flowrite™


Mini Pump

Installation, Operation,
& Maintenance Manual



General Information & Precautions

This publication provides detailed instructions for installing the single point watering system kit and/or related water supply. Thoroughly review this document before any installation procedures are performed.



The following safety statements relate to specific safety issues and must be read, understood, and heeded before a kit is installed. Failure to do so could result in personal injury and/or property damage.



DANGER

- Battery – Explosive gases! Do not smoke. Keep sparks and flames away from the vehicle and service area. Ventilate when charging or operating vehicle in an enclosed space. Wear a full face shield and rubber gloves when working on or near batteries.
- Battery – Poison! Contains acid! Causes severe burns. Avoid contact with skin, eyes, or clothing. Antidotes:
 - External: Flush with water. Call a physician immediately.
 - Internal: Drink large quantities of milk or water. Follow with milk of magnesia or vegetable oil. Call a physician immediately.
 - Eyes: Flush with water for 15 minutes. Call a physician immediately.




WARNING

- Follow the procedures exactly as stated in this instruction, and heed all DANGER, WARNING, and CAUTION statements in this instruction as well as those on the vehicle and battery charger.
- Only trained technicians should service or repair the single point watering system. Anyone doing even simple repairs or service should have knowledge and experience in plumbing, electrical and mechanical repair. The appropriate instructions must be used when performing maintenance, service, or accessory installation.
- Prior to servicing the vehicle or leaving the vehicle unattended, turn the key switch OFF, remove the key, and chock the wheels when servicing the vehicle.
- Wear safety glasses or approved eye protection when servicing any part of the watering system. Wear a full face shield and rubber gloves when working on or near batteries.
- Do not wear loose clothing or jewelry such as rings, watches, chains, etc., when servicing the vehicle or battery charger.
- Moving parts! Do not attempt to service the vehicle while it is running.
- Hot! Do not attempt to service hot engine, exhaust system, or motor. Failure to heed this warning could result in severe burns.
- Use insulated tools when working near batteries or electrical connections. Use extreme caution to avoid shorting of components or wiring.
- If wires are removed or replaced, make sure wiring and wire harness are properly routed and secured. Failure to properly route and secure wiring could result in vehicle malfunction, property damage, personal injury, or death.

Package Contents

Note: Pictures may differ slightly from your specific application.



Left: Pump assembly
Above: Clamp & coupler assembly

Installation

Step 1 - Assembly

- Attach coupler to water feed tubing using provided clamp.

Step 2 - Connect to Power Source

- Apply 12V DC to the electrical leads. Brown wire is positive and white wire is negative.

Note: If the pump is wired with the wrong polarity, the pump will turn, but not pump properly!

Watering Procedures

1. Water After Charge

- Electrolyte levels drop during discharge and rise during charge. In addition, charging generates heat, fluid expansion and explosive gases. Watering a battery before charge (or with a low charge level) can lead to boil over resulting in potential damage of the watering system, battery and vehicle.

Water, when needed, must be added to fully charged battery. Prior to charging, there must be sufficient water to cover the plates. If the battery has been discharged (partially or fully), the water level should still be above the plates.

2. Watering Intervals

- Watering intervals are dependent on the local climate, charging methods, application, and age of batteries. Flow-Rite recommends that new batteries be checked once a month and older batteries be checked weekly until you get a feel for your water consumption rate.

Typically for a heavy use application, we recommend watering a maximum of once per week, and for light use applications once per month. You should not water a battery that has been sitting for an extended period of time with no activity (non use or not on charge) such as a battery that has sat idle over the weekend. It is best to water a warm battery that has just been fully charged.

Important: Water quality is important to maintain the life of your battery and watering system. Always use water that meets the quality requirements of your battery's manufacturer.

Operation

For successful operation of your Single Point Watering system always:

1. Only use Flow-Rite approved equipment
Warning! Use of unapproved equipment or modification of approved equipment can lead to system failure and will void your warranty
2. Always follow Flow-Rite's required watering procedures.
3. Perform regular scheduled maintenance!

Warning! Only fill batteries after they have been fully charged, and require water.

Step 1 - Submerge pump & Apply power



- Place pump in container filled with clean water. Container should be below the top of the battery to prevent siphoning. Top of battery must be no higher than 4 feet above the pump. Once submersed apply power to pump.

NOTE: Water must be not exceed 60°C. Debris can damage pump and SPW valves. Do not run pump dry.

Step 2 - Qualify Water Supply

- Check flow rate through included purger by mating purger with hose end assembly. Verify that a minimum of 2 GPM (Gallons per minute) is achieved. This can be measured with a bucket and a stop watch or a watch with a second hand.

Note: Should a 2 GPM flow rate not be produced refer to the troubleshooting guide in your water supply's instruction booklet.

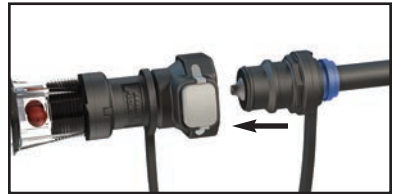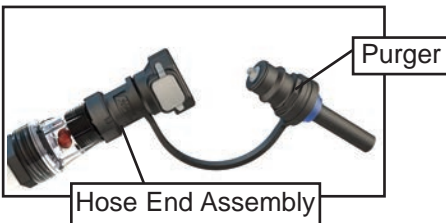


Step 3 - Remove Dust Cover



Operation Continued


Step 4 - Mate Couplers

- Insert the male coupler on the spw system into the female coupler on the end of the water supply.

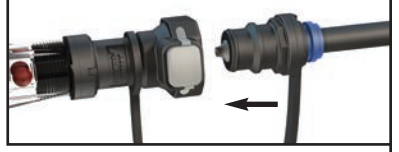

Step 5 - Observe Flow Indicator

- The red balls inside the flow indicator will begin to spin indicating that water is flowing into the battery. As the cells fill and the valves shut off, the balls will begin to spin slower until they come to a stop. This indicates that all valves have shut off and filling is complete.

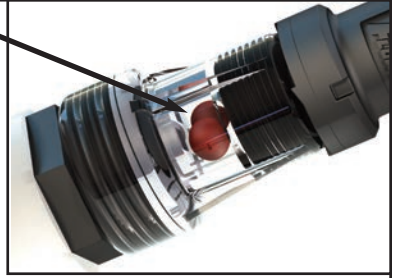

Step 6 - Disconnect

- When the balls stop spinning, and not before, immediately disconnect the couplers by depressing the push button on the female coupler. If the water supply is left connected after the filling process is finished it could lead to an overflow. Disconnecting before the balls come to a complete stop will lead to underfilled cells.



CAUTION: If at any time during the filling process you have a valve failure disconnect immediately and refer to the troubleshooting section.

Step 7 - Replace Dust Cover

- Place dust cover back over the male coupler. Do not push cover past the large barb on the coupler.

Tip: If you slightly squeeze the dust cover when sliding it over the coupler it will create a vacuum allowing it to hold tightly.



Regular Maintenance

Your single point watering system requires regular preventative maintenance on at least a quarterly basis.

1. Check all screens and/or filters on water supplies

Clean or replace all filters / line strainers as necessary. Failure to do so can cause a reduction in the water pressure and flow rates needed to operate the system properly. A filter screen can be found on the inlet of the flow indicator.

2. Inspect the condition of all tubing connections, red end caps, swivel T's, and couplers.

Make sure that all parts are in good working condition and are secure, leak free, and properly connected. The coupler must have an O-ring and dust cover properly attached.

3. Electrolyte Levels

Flow-Rite™ recommends checking the electrolyte level in each cell for accuracy after the system has been installed and operational for three months.

Seasonal Maintenance

Water Supplies

Water supplies must be drained and stored in an empty state if they will be exposed to freezing temperatures. Failure to do so can cause permanent damage.

Watering Systems

If you have vehicles that are taken out of service or put into storage for a period of 6 weeks or longer, your single point watering system will require seasonal maintenance. No special steps need to be taken for winterization of the SPW system that is mounted on the batteries; however, the following steps need to be followed when bringing your vehicle back into service:

1. After the batteries have been fully charged / equalized, connect the system to its water supply for 3-5 seconds then disconnect regardless of whether or not the batteries are completely full.
2. Return the vehicle to its regular service.
3. Place the vehicle back into its regular watering schedule.

Operating Specifications

Operating Requirement of SPW system

Flow Rate:	2.0 - 5.0 gallons per minute* 7.6 - 19.0 liters per minute
Pressure Range:	3.0 - 35.0 PSI (no flow, static) .21 - 2.4 bar
Temp. Range:	Freezing - 150° F Freezing - 65.5° C

Water Supply Operating Requirements

Inlet Pressure Range:	40 - 100 PSI (no flow, static)
Temp. Range:	33 - 150° F 1 - 65.5° C

All product specifications and requirements should be met for proper operation of your Flow-Rite SPW system. Contact your battery supplier or Flow-Rite if you have any questions regarding product specifications or how to verify a water supply.

*Flow rate should be measured at the end of a purger (female/male coupler combination).

Troubleshooting

In the event that a valve does not shut off, qualify water supply to ensure that it is producing a minimum of 2 GPM (measured through the purger). If the issue persists and the water supply qualifies, call for service. If it does not qualify, perform maintenance procedures on the water supply and re-qualify. If it does not qualify after performing maintenance, call for service.

Warranty

1 Year Limited Warranty for Water Supply Products

Flow-Rite Controls warrants to Purchaser that its product, the Flow-Rite Mini Pump, will be free of all defects in material and workmanship for one (1) year after the date of purchase. If within one year of the date of purchase, the Mini Pump, fails to perform due to a manufacturing defect, Flow-Rite Controls will repair or replace the Mini Pump, free of charge.

For the full warranty document, please go to www.flow-rite.com/resources/battery-care-literature/

If you have more questions, email customerservice@flow-rite.com or call 616-583-1700.



Flow-Rite Controls
960 74th Street
Byron Center, MI 49315
PH: 616-583-1700
www.flow-rite.com



Printed in USA © 2021
Protected under U.S. & foreign
patents and patents pending